

MADE-TO-MEASURE

How to Measure Roller Blinds



ROLLER BLIND SPECIFICATION

BLIND SIZES


- Minimum Size: Width 300mm x Drop 300mm
- Maximum Size: Width 2800mm x Drop 5000mm*
- The fabric will be 35mm smaller in width than the rail/tube to accommodate the control chain.

*Depending on fabric choice, some fabrics are restricted to a maximum width or drop.


HEADING STYLES

- A classic header is great value and quality. The fabric is attached to a slimline metal tube. This option is particularly useful for areas with limited space.
- A cassette header is a premium option. The sleek metal box, available in white, silver or anthracite, hides the mechanism. The cassette in most cases is covered with the same fabric as the blind. White end caps are used on the ends of the cassette.

CLASSIC HEADER

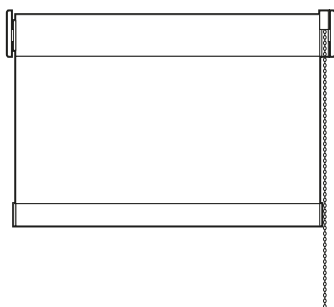

CASSETTE HEADER

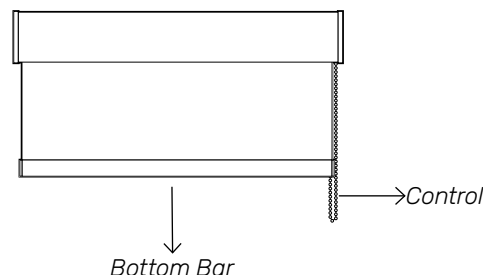

OPTIONS

- **Fabric:** Plain colours, blackout, woven textures, jacquards, sheers, waterproof, light filtering and printed designs.
- **Bottom Bar:** This is to give weight and stability to the fabric and comes wrapped in the same fabric as the blind for a coordinated finish. Also available in black, white, silver and anthracite.
- **Control:** The chain allows you to operate the blind up and down and can be positioned on the left or right side. Colour options are white or black plastic, with an option to upgrade to a metal chain in nickel or brass at a surcharge.
- **Motorised:** Control your blinds via remote, app, voice or pull with motorised blinds. Available as a hardwired or wireless system, motorised blinds also allow your window coverings to be controlled with your smart home system or smart speaker.



Blinds Child Safety Awareness: Keep all cords and chains out of the reach of children using the safety hook, which has been provided for you. Loose cords or chains should never be tied together.



MEASURING FOR YOUR BLINDS

TOOLS REQUIRED

Metal Measuring Tape, Pen & Paper

HOW TO MEASURE

1. Only use a metal measuring tape and record your measurements in mm.
2. Measurements must be accurate for a perfect fit. We will make the necessary allowances to ensure the blind fits the window.
3. Decide on how you want the blind fitted – 'Inside Recess' is within the window frame or 'Outside Recess – Exact Size' is to your desired point on the wall outside of the window frame.
4. Always measure the width first (across the window) and then the drop (top to bottom) in 3 places.
5. Record your measurements in the same order.
6. Look for any obstructions such as handles. You will need to take their position into account to ensure a perfect fit.
7. Finally, re-check your width and drop measurements to ensure accuracy.



MEASURING FOR YOUR BLINDS

INSIDE RECESS (RECESS)

Measure at the 6 positions shown (3 horizontal, 3 vertical) and record the smallest dimension as the 'Recess Size'. (e.g. in PIC 1 your width measurement will be 918mm and your drop measurement is 993mm). Provide the width measurement first.

OUTSIDE RECESS (EXACT SIZE)

If you plan on fitting your blind outside the window recess the blind should be slightly larger than the inside recess to give better coverage. Take your inside recess measurement and add 200mm / 20cm / 1inch / to the width and the drop, this is what you will enter when ordering your blind, next choose outside recess when asked for your fitting type.

